 
 



**IMPORTANT:** You must remove left hand bolt from neutral switch (3) and replace it with a flat-head counter-sink screw provided to make space for starter! On some applications, in order to provide clearance for the solenoid of the Valeo starter, the left side bolt of the neutral safety switch may need to be replaced with the flat-head, counter-sunk screw provided.

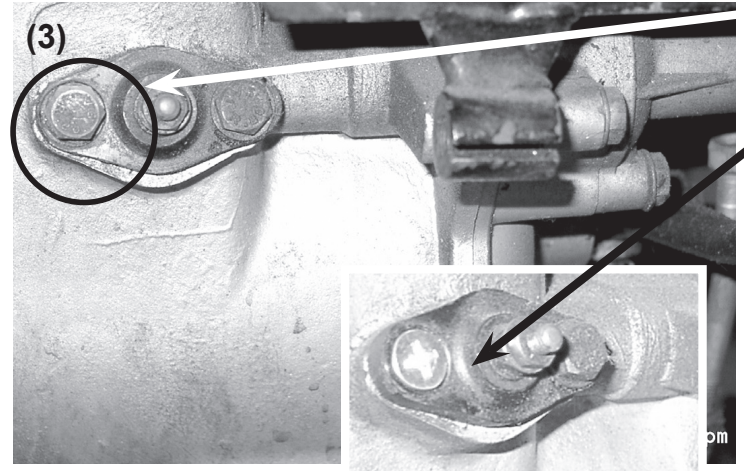

**IMPORTANT:** You must remove left hand bolt from neutral switch (3) and replace it with a flat-head counter-sink screw provided to make space for starter! On some applications, in order to provide clearance for the solenoid of the Valeo starter, the left side bolt of the neutral safety switch may need to be replaced with the flat-head, counter-sunk screw provided.

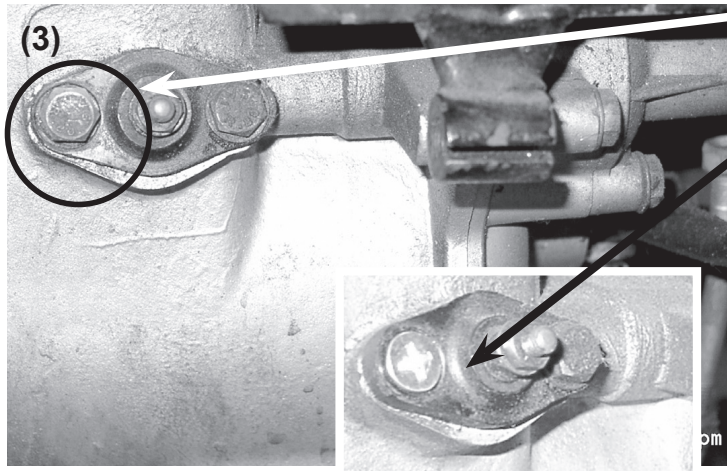

 **IMPORTANT:** You must remove left hand bolt from neutral switch (3) and replace it with a flat-head counter-sink screw provided to make space for starter! On some applications, in order to provide clearance for the solenoid of the Valeo starter, the left side bolt of the neutral safety switch may need to be replaced with the flat-head, counter-sunk screw provided.

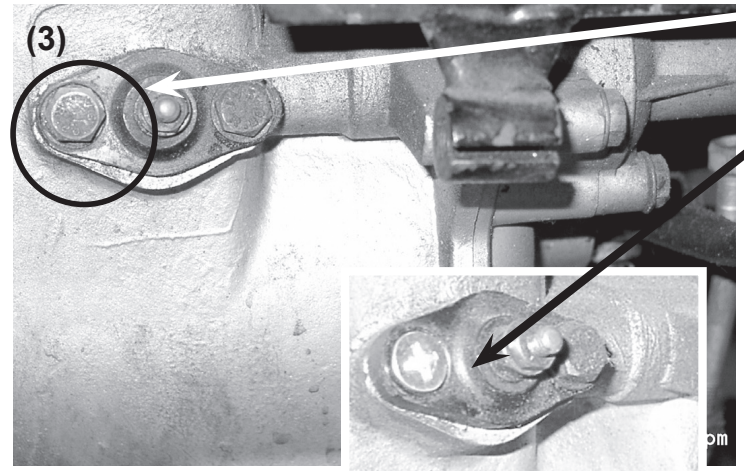

**IMPORTANT:** You must remove left hand bolt from neutral switch (3) and replace it with a flat-head counter-sink screw provided to make space for starter! On some applications, in order to provide clearance for the solenoid of the Valeo starter, the left side bolt of the neutral safety switch may need to be replaced with the flat-head, counter-sunk screw provided.